

E-rewinder



NL	Gebruiksaanwijzing
EN	User manual
FR	manuel de l'utilisateur
DE	Gebrauchsanweisung
ES	manual del usuario
IT	manuale d'uso
PT	manual do utilizador
PL	instrukcja obsługi
CZ	uživatelský manuál
BG	Наръчник на потребителя
HU	felhasználói kézikönyv
NO	brukermanual
SE	Användarmanual



English:

IMPORTANT SAFETY PRECAUTIONS FOR USING THE E-REWINDER AND BATTERY CHARGER SAVE THESE REGULATIONS

1. These operating instructions contain important safety operating requirements.
2. Read all regulations and warnings regarding the E-rewinder and battery charger.
3. **CAUTION** To reduce the risk of accidents, use only the charger provided. Chargers of other brands and types can cause injuries or damage.
4. To avoid damaging the plug and power cord, pull the power cord out of the socket by grasping the plug.
5. Make sure that no one can step on or trip over the cord and that nothing is placed on the cord.
6. Also, do not use the battery charger if it has been dropped, subjected to a severe impact, or if you suspect that it has been damaged. In these cases, have the battery charger checked by the manufacturer first. (or contact them)
7. The battery charger is not intended for use by small children or mentally disturbed unsupervised persons.
8. If the battery life has become particularly short, stop using it immediately, otherwise there is a risk of overheating, burns and even an explosion.
9. Do not charge the battery if the temperature is BELOW 0°C or ABOVE 40°C.
10. Do not store the battery charger and the E-rewinder in places where the temperature can reach up to 50°C or higher.

ADDITIONAL SAFETY INSTRUCTIONS FOR THE DEVICE

1. Remember that the E-rewinder is always ready for use, as it does not need to be plugged into a power outlet.
2. Make sure you always have firm support for the feet.
3. Only operate the E-rewinder when holding it with your hands.
4. Make sure that the E-rewinder is always mounted with the magnet on a solid and steel background before use, make sure that the device is securely attached.


KEEP THESE INSTRUCTIONS.

OPERATING INSTRUCTIONS

1. Load:

- Only use the house/car charger that is included.
- For battery life, always leave the battery low (20%) before charging.
- Before inserting the charger into the E-rewinder, always check the charger and cable for damage.
- If the charger is plugged into the E-rewinder, a light is on the charger, red = battery not yet full
Green = battery full.

2. Use E-rewinder:

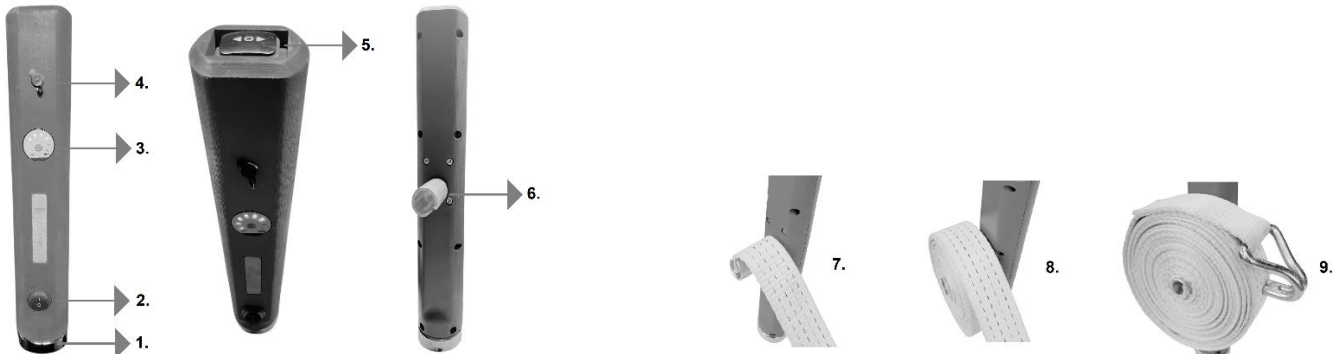

- 1: Magnet
- 2: On/off button
- 3: Battery indicator
- 4: Charging point
- 5: Control Switch
- 6: Roller Tube

- * Place the device with the magnet (1) against a solid steel surface.
- * Turn on the device with the on/off button (2)
- * Insert the end of the tension strap into the slot of the retractor tube (6-7)
- * Press the control switch and guide the strap with your hand to allow the strap to roll up completely (8-9)
- * Turn off the device after use, to prevent the roll-up tube from rotating when stored.
- * Check the battery status by pressing the central button on the battery indicator (3)
- * When not charging the device, always make sure that the protective rubber is on the charging point (4)
This prevents dirt from getting in and making poor contact with the charger.

On our website you can see videos of how it works (www.e-rewinder.be)

WARRANTY CONDITIONS

ARTICLE 7 of the general terms and conditions; (can be found on our website)

The customer is responsible for checking the delivered goods or services for their conformity and visible defects.

The seller is liable to the consumer for any lack of conformity that already exists at the time of delivery of the goods and that becomes apparent within a period of two years from the aforementioned delivery. The following are therefore excluded, among other things: any direct or indirect damage caused to the device after delivery (e.g. oxidation, shocks, fall, etc.); the replacement of accessories or fittings that need to be replaced regularly; defects due to fire, water damage, lightning, accidents and natural disasters; defects caused by intent, negligence or improper handling, poor or inadequate maintenance or abnormal use or use of the device contrary to the regulations; normal wear and tear; intervention by the consumer himself or by a third party; the defects that the consumer knew or should reasonably have been aware of at the time of the sales agreement.

In order to be admissible, all complaints regarding a lack of conformity between the agreed goods or services and the delivered goods and services must be communicated to the seller by registered letter within 10 days. In the event that the delivered goods or services are defective, the customer can only claim a replacement or repair, at the seller's discretion, without the customer being able to claim any form of compensation. The customer is obliged to enable the seller to investigate the complaint and must therefore fully cooperate. The repair or replacement free of charge may not be required if the repair or replacement would be impossible or disproportionate. A repair or replacement is considered disproportionate if it entails costs for the seller that are unreasonable in relation to the value of the goods in the absence of the lack of conformity, the seriousness of the lack of conformity and whether the alternative remedy is actually possible without significant inconvenience to the customer. The customer is never entitled to any compensation or compensation for damage caused by a defect in the good, regardless of whether the customer is entitled to a repair under the legal warranty.

If you have any questions or complaints, you can always email us at info@e-rewinder.be or fill in our contact form on our website www.e-rewinder.be WD-Construct Reppelerweg 309, 3950 Bocholt Belgium

